

FORTUS ABS-M30

Characterization of Material Properties

OVERVIEW

Material properties are an important consideration when evaluating additive manufacturing for advanced applications such as production runs of end-use parts. Since these products will be in service for extended periods and in varying conditions, it is imperative to qualify the properties beyond published specifications.

To characterize the effects of time, temperature and environment, Loughborough University (Loughborough, UK) performed extensive testing on Fortus® ABS-M30 thermoplastic. Conducted over a 52-week period, the evaluation measured five properties at temperatures ranging from -40 °C to 100 °C. Additionally, testing evaluated the samples in three environmental conditions: wet (immersed in water), dry (15% relative humidity) and controlled (50% relative humidity). The mechanical properties included:

- Tensile strength
- Young's modulus
- Flexural strength
- Flexural modulus
- Elongation at break

In accordance with ISO 527 and ISO 178 standards, the evaluation tested 10 samples for each condition. Each sample was produced on a Fortus 400mc 3D Production System using default build parameters* and a T12 tip, which produces a 0.18 mm slice height. To quantify the effects of orientation, test samples used both an upright and on-edge alignment (Figure 1).

The university's comprehensive report, which is available upon request, documents 1200 combinations of mechanical properties and test conditions. To summarize these findings, the following graphs present ABS-M30's performance as time, temperature and environment change while all other factors remain constant. For each condition, graphical illustrations depict the change in tensile strength, flexural modulus and elongation at break for samples built in the on-edge orientation¹. Also included is a comparison of test values to published properties.

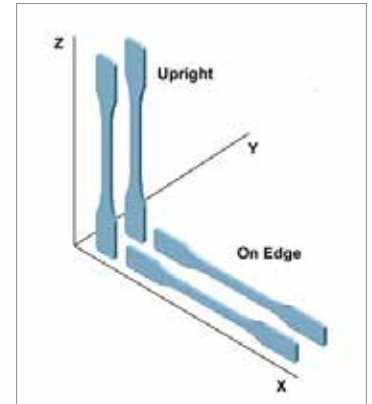


Figure 1: Test sample orientations

**To optimize mechanical properties, Fortus offers user-controls that will alter construction parameters.*

Tested vs. Published

To substantiate previously published material properties, Table 1 presents the differences in values for test data and published specifications. Testing standards were similar for both cases. Loughborough followed ISO 527 and ISO 178, which are technically equivalent to the ASTM standards (D838 and D790) that the published data used. Both used samples at approximately 20 °C, controlled condition and on-edge orientation. However, slice heights differed. Loughborough used 0.18 mm slices; the published data used 0.25 mm. With variances of ± 15%, the university's testing validates four of the five properties.

Elongation at break is the exception. Test samples have an average of 7%, which is 78% higher than the published value. Although there is no definitive explanation for the variance, one possibility is that the published data's samples were exposed to elevated humidity levels. As shown in later graphs, moisture tends to decrease elongation at break. Another possibility is that small changes between the two test methods yielded a large difference. Loughborough found that elongation at break is more sensitive to changes in build characteristics than all other properties.

¹Part orientation, as well as build parameters, will alter mechanical properties. Please consider the report data accordingly.

Property	Published		Test Result		% Difference
Tensile Strength	ASTM D638	36 MPa	ISO 527	33 MPa	-10%
Young's Modulus	ASTM D638	2413 MPa	ISO 527	2771 MPa	15%
Flexural Strength	ASTM D790	61 MPa	ISO 178	64 MPa	5%
Flexural Modulus	ASTM D790	2317 MPa	ISO 178	2028 MPa	-12%
Elongation at Break	ASTM D638	4%	ISO 527	7%	78%

Table 1: Test results compared to published material properties. Testing standards are technically equivalent, so results are directly comparable.

INTRODUCTION

To show the effects of age on ABS-M30, mechanical properties were measured at 1, 4, 13, 26 and 52 weeks. The bar graphs for each mechanical property show the value at 20 °C for samples built on edge and stored in a controlled environment. Each graph also shows reference markers for wet and dry samples as well as line graphs for temperatures of -40, 0, 40, 80 and 100 °C.

The test results show that all properties are stable over a 52-week period. There is little variance as the samples age. Changes in part storage conditions and temperatures do not affect stability over time, with the exception of elongation at break. Exposed to moisture, elongation at break decreases with age.

TENSILE STRENGTH

Over 52 weeks, tensile strength varies by just 0.73 MPa (2.3%), which shows that it is unaffected by age (Figure 2a, b, c). This is also true for wet and dry samples. Although wet conditions tend to increase tensile strength, the change is small (<2.8 MPa) and fairly stable over time.

At temperatures ≥ 0 °C, tensile strength is stable over the 52-week period. For the -40 °C sample, there is a decline of 6.9 °C (13.5%). Figure 2 also shows a significant decrease in tensile strength between 80 °C and 100 °C for all time periods. This is expected because the higher temperature is near to ABS-M30's glass transition temperature (T_g) of 108 °C. The following graphs show a similar drop at 100 °C for all mechanical properties.

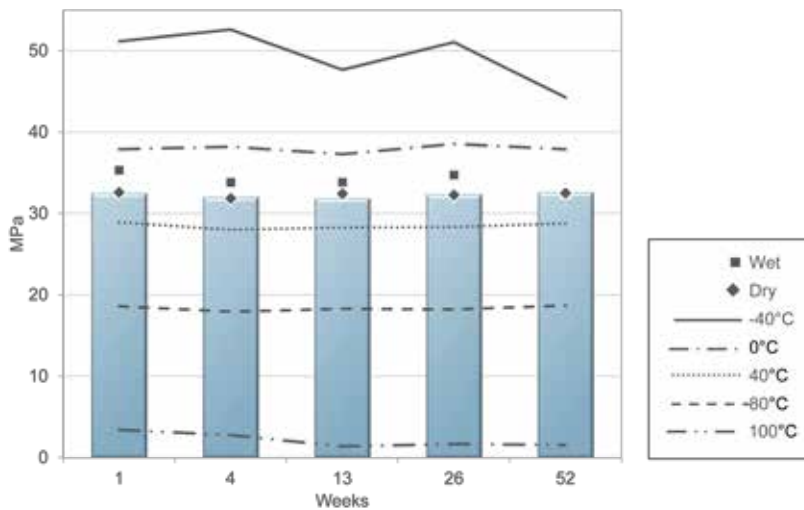


Figure 2a: Tensile strength - 20 °C, controlled environment, on edge.

Week	Tensile Strength (MPa)		
	Chart Data	Min	Max
1	32.5	32.3	33.0
4	32.1	32.0	32.2
13	31.9	31.6	32.3
26	32.4	32.3	32.6
52	32.6	32.5	33.1

Figure 2b: Tensile strength - 20 °C, controlled environment, on edge.

Week	Tensile Strength (MPa)						
	Wet	Dry	-40 °C	0 °C	40 °C	80 °C	100 °C
1	35.3	32.6	51.2	37.9	28.9	18.6	3.4
4	33.8	31.8	52.6	38.2	28.0	17.9	2.8
13	33.8	32.4	47.7	37.3	28.3	18.3	1.4
26	34.7	32.3	51.0	38.6	28.3	18.2	1.7
52	32.5	32.5	44.3	37.9	28.8	18.7	1.6

Figure 2c: Secondary data, tested in various conditions.

FLEXURAL MODULUS

As with tensile strength, aging has little effect on flexural modulus. The maximum variance is only 162 MPa (7.8%), and the difference between weeks 1 and 52 is just 36 MPa (1.8 %). The sharp decline at week 13 and subsequent rise at week 26 are inconsistent with the values for the wet and dry samples, which have slight increases for these periods. Weeks 13 and 26 results are also inconsistent with those at other temperatures.

In general, flexural modulus is relatively stable for all temperatures and environmental conditions. While each has a tendency to increase through week 13, the values stabilize afterwards. The exception is at 100 °C, which has a sharp 954 MPa drop over time.

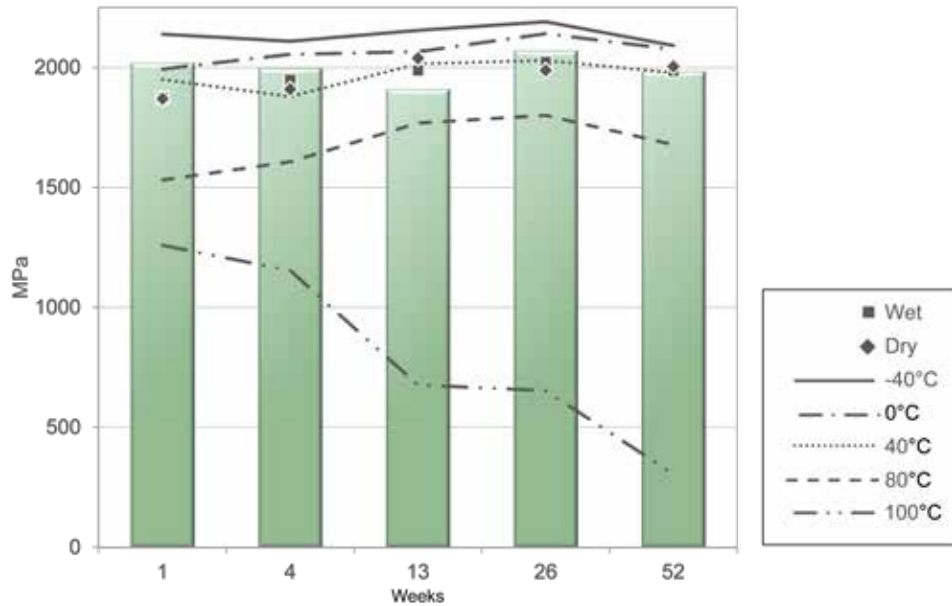


Figure 3a: Tensile strength - 20 °C, controlled environment, on edge.

Week	Flexural Modulus (MPa)			Flexural Modulus (MPa)						
	Chart Data	Min	Max	Wet	Dry	-40 °C	0 °C	40 °C	80 °C	100 °C
1	2022	1896	2134	1874	1869	2139	1993	1950	1531	1259
4	1999	1750	2167	1949	1909	2109	2055	1879	1607	1154
13	1911	1828	1987	1988	2039	2155	2066	2015	1768	677
26	2073	1893	2223	2023	1988	2191	2141	2029	1801	653
52	1986	1911	2018	1986	2004	2092	2075	1978	1678	305

Figure 3b: Tensile strength - 20 °C, controlled environment, on edge.

Figure 3c: Secondary data, tested in various conditions.

ELONGATION AT BREAK

Elongation at break proves to be somewhat erratic with a range of 1.2 points (16.5%) over the 52-week testing period. However, the variance decreases to 0.7 points (9.8%) if week 13, which is inconsistent with the values for other conditions, is excluded. Also, elongation at break stabilizes after the first week, having only a 0.24-point variance between weeks 4, 26 and 52.

The combination of age and temperature has no trend; results vary widely. Environmental conditions are more consistent. Part storage has considerable impact on elongation at break as the material ages. Wet storage conditions produce a sharp drop between weeks 1 and 13 (3.1 points) that places elongation at break well below that for the controlled condition. On average, wet samples are 2.0 points below the controlled condition for weeks 4 through 52. Dry conditions, on the other hand, have a large increase over the controlled conditions after week 4.

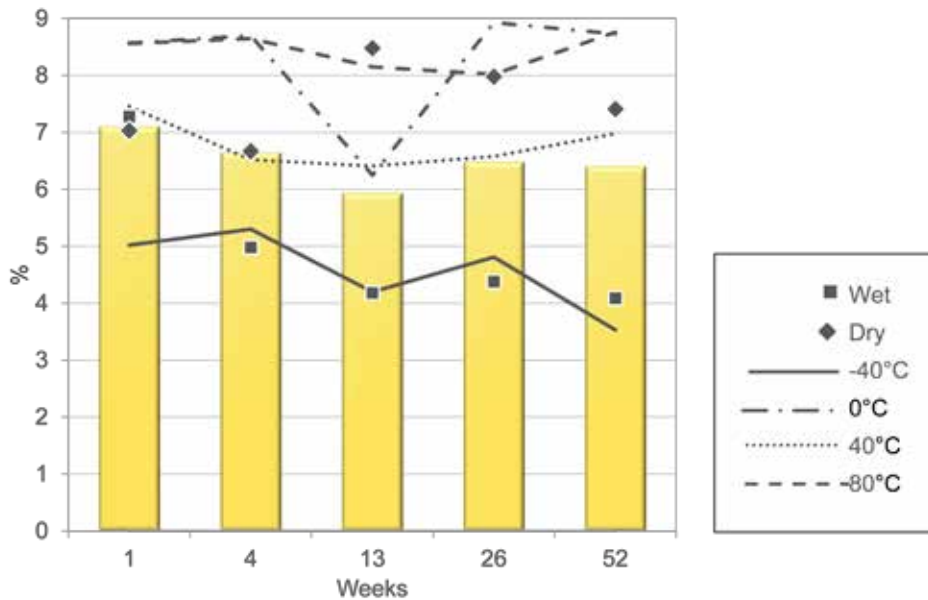


Figure 4a: Elongation at break - 20 °C, controlled environment, on edge.

Week	Elongation at Break (%)		
	Chart Data	Min	Max
1	7.1	6.2	9.3
4	6.7	6.0	7.4
13	5.9	5.3	7.1
26	6.5	3.5	8.8
52	6.4	3.2	8.0

Figure 4b: Elongation at break - 20 °C, controlled environment, on edge.

Week	Elongation at Break (%)						
	Wet	Dry	-40 °C	0 °C	40 °C	80 °C	100 °C
1	7.3	7.0	5.0	8.6	7.5	8.6	N/A
4	5.0	6.7	5.3	8.7	6.5	8.7	N/A
13	4.2	8.5	4.2	8.2	6.4	6.3	N/A
26	4.4	8.0	4.8	8.0	6.6	8.9	N/A
52	4.1	7.4	3.5	8.8	7.0	8.7	N/A

Figure 4c: Secondary data, tested in various conditions.

Note: Values for 100 °C were not reported. The tests were ended prior to sample breakage due to severe deformation.

EFFECTS OF TEMPERATURE

ABS-M30

INTRODUCTION

To show the effects of temperature on ABS-M30, mechanical properties were measured at -40, -20, 0, 20, 40, 60, 80 and 100 °C. The bar graphs for each mechanical property show the value for 4-week-old samples built on edge and stored in a controlled environment. Each graph also includes markers representing the values for wet and dry part storage conditions and line graphs for samples at 1, 13, 26 and 52 weeks.

The results of the material testing show that temperature, as would be expected, has a significant impact on the mechanical properties of ABS-M30. While temperature's effect on elongation at break is irregular, both tensile strength and flexural modulus demonstrate a somewhat linear, downward trend as temperatures rise. For both properties, there is also a sharp decline above 80 °C. Elongation at break is not only erratic; it is also heavily influenced by the combination of environmental conditions and temperature.

TENSILE STRENGTH

At 80 °C and below, a temperature drop increases tensile strength (Figures 5a, b, c). The 34.7 MPa change over a 120 °C range is nearly linear. Above 80 °C, there is a sharp, 15.2 MPa drop, which is expected since the temperature is approaching ABS-M30's Tg. For temperatures at or above freezing, the age of the sample has negligible effect on tensile strength. Below freezing, younger samples have higher values. For example, at -40 °C the 1-week sample's value is 6.9 MPa (15.6%) higher than that for the 52-week sample. At or above 20 °C, dry samples have roughly the same tensile strength as the controlled samples. Moisture, on the other hand, has a noticeable effect. Between -20 °C and 20 °C, the wet samples have higher tensile strengths (1.8 MPa to 5.4 MPa greater than the controlled samples). Above 20 °C, the wet samples have lower tensile strengths than both the dry and controlled samples.

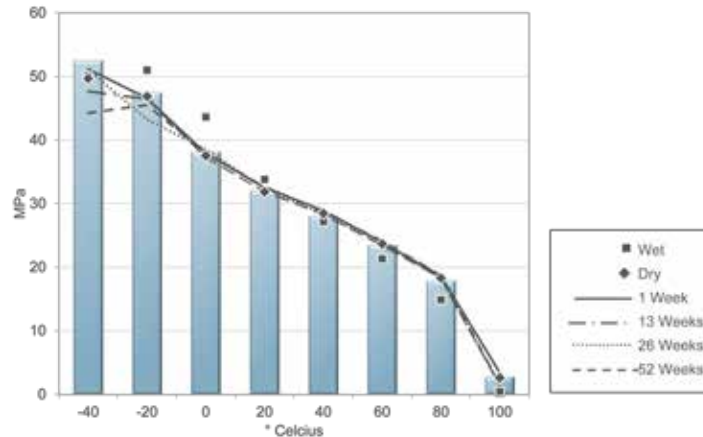


Figure 5a: Tensile strength - 4 weeks, controlled environment, on edge.

°C	Tensile Strength (MPa)		
	Chart Data	Min	Max
-40	52.6	50.4	53.8
-20	47.3	47.0	48.0
0	38.2	37.5	39.8
20	32.1	32.0	32.2
40	28.0	27.2	28.4
60	23.5	23.4	23.6
80	17.9	17.7	18.3
100	2.8	1.9	4.2

Figure 5b: Tensile strength - 4 weeks, controlled environment, on edge.

°C	Tensile Strength (MPa)					
	Wet	Dry	1 Week	13 Weeks	26 Weeks	52 Weeks
-40	50.1	49.7	51.2	47.7	51.0	44.3
-20	51.0	46.9	46.6	46.4	43.3	45.5
0	43.6	37.5	37.9	37.3	38.6	37.9
20	33.8	31.8	32.5	31.9	32.4	32.6
40	27.2	28.5	28.9	28.3	28.3	28.8
60	21.3	23.7	23.9	23.4	23.9	24.1
80	14.9	18.3	18.6	18.3	18.2	18.7
100	0.4	2.6	3.4	1.4	1.7	1.6

Figure 5c: Secondary data, tested in various conditions.

FLEXURAL MODULUS

While not as linear as tensile strength, flexural modulus also demonstrates a downward trend as temperature increases (Figure 6). From -40 °C to 80 °C, flexural modulus decreases by 502 MPa (23.8%). The value at -20 °C can be ignored since it is inconsistent with the general trend for other sample conditions. As with tensile strength, there is a sharp drop for the 100 °C sample (453 MPa).

Below 80 °C, the effect of sample age is reasonably small, with variances of 45 MPa to 162 MPa. At 80 °C, there is a 270 MPa (15.0 %) variance between samples, and the difference is much larger for the 100 °C test condition. At this temperature, the difference between 1-week and 52-week samples is 954 MPa (75.8%).

In the dry condition, the variance from the control is slight at temperatures below 80 °C. With a tendency to be lower than the control, the largest deviation is just 4.5%. At higher temperatures, the difference is more pronounced. For example, at 100 °C the dry condition is 155 MPa less than that of the control.

Wet samples behave much like those for tensile strength. Below freezing, the wet condition increases flexural modulus. Above freezing, it decreases the values. At 80 °C and above, the decrease is pronounced. The 100 °C, wet sample's flexural modulus is 993 MPa (86.0%) lower than that for the controlled condition.

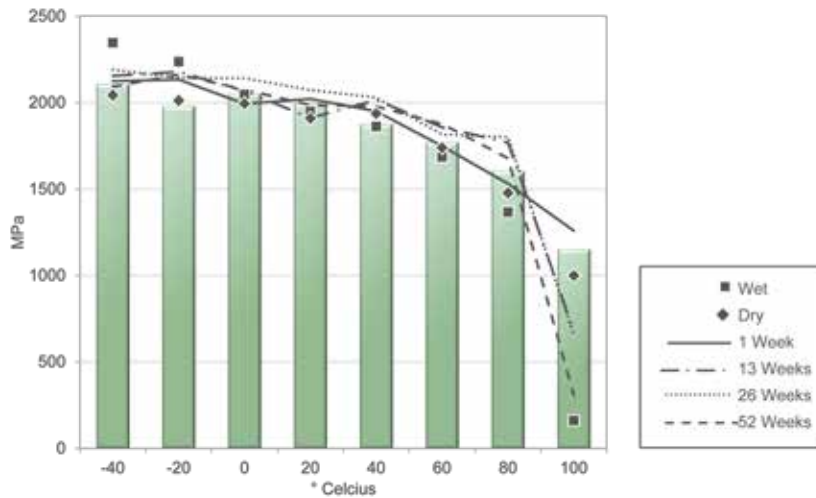


Figure 6a: Flexural modulus - 4 weeks, controlled environment, on edge.

°C	Flexural Modulus (MPa)		
	Chart Data	Min	Max
-40	2109	1988	2358
-20	1981	1917	2113
0	2055	1767	2277
20	1999	1750	2167
40	1879	1705	2067
60	1772	1511	2106
80	1607	1453	1878
100	1154	1015	1353

Figure 6b: Flexural modulus - 4 weeks, controlled environment, on edge.

°C	Flexural Modulus (MPa)					
	Wet	Dry	1 Week	13 Weeks	26 Weeks	52 Weeks
-40	2347	2043	2124	2155	2191	2092
-20	2237	2012	2133	2178	2144	2162
0	2047	1994	1993	2067	2141	2075
20	1949	1909	2022	1911	2073	1986
40	1862	1937	1950	2015	2029	1978
60	1686	1739	1748	1857	1816	1876
80	1367	1477	1531	1768	1801	1678
100	161	999	1259	677	653	305

Figure 6c: Secondary data, tested in various conditions.

EFFECTS OF TEMPERATURE

ABS-M30

ELONGATION AT BREAK

The erratic, seemingly random values of elongation at break are evident in Figures 7a, b, c. The spike at 0 °C for all but the wet test condition underscores this observation. At 0 °C, there is a 2.1 to 3.5 point increase in elongation at break followed by a sharp drop of 1.5 to 2.4 points.

However, if this spike is disregarded, there is an upward trend as temperatures rise for controlled and dry samples of all ages. For 4-week-old, controlled samples, elongation at break increases 3.4 points (39%). For dry, the increase is 2.6 points (55.3%). Moisture does the opposite; decreasing values by as much as 64.6%

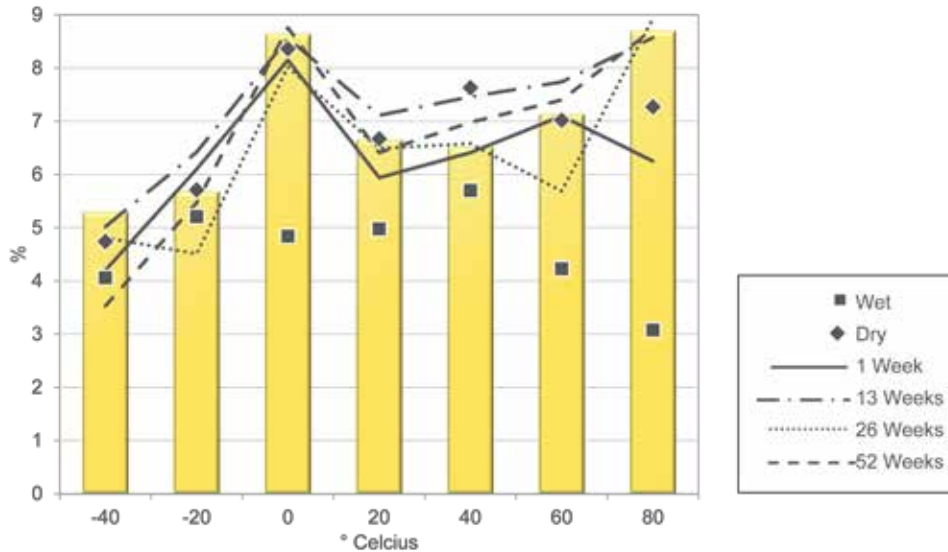


Figure 7a: Elongation at Break - 4 weeks, controlled environment, on edge.

°C	Elongation at Break (%)		
	Chart Data	Min	Max
-40	5.3	4.7	5.6
-20	5.7	5.2	6.3
0	8.7	7.1	10.1
20	6.7	6.0	7.4
40	6.5	4.5	8.0
60	7.1	6.5	8.0
80	8.7	6.0	11.2
100	NA	NA	NA

Figure 7b: Elongation at Break - 4 weeks, controlled environment, on edge.

°C	Elongation at Break (%)					
	Wet	Dry	1 Week	13 Weeks	26 Weeks	52 Weeks
-40	4.1	4.7	5.0	4.2	4.8	3.5
-20	5.2	5.7	6.4	6.1	4.5	5.5
0	4.8	8.4	8.7	8.2	8.0	8.8
20	5.0	6.7	7.1	5.9	6.5	6.4
40	5.7	7.6	7.5	6.4	6.6	7.0
60	4.2	7.0	7.7	7.1	5.7	7.4
80	3.1	7.3	8.6	6.3	8.9	8.7
100	NA	NA	NA	NA	NA	NA

Figure 7c: Secondary data, tested in various conditions.

Note: Values for 100 °C were not reported. The tests were ended prior to sample breakage due to severe deformation.

EFFECTS OF ENVIRONMENTAL CONDITIONS

ABS-M30

INTRODUCTION

Test samples were stored in three conditions— wet, dry and controlled—to show the influence of moisture on mechanical properties. Wet samples were immersed in water; dry samples were exposed to 15% relative humidity; and controlled samples were maintained at 50% relative humidity. The bar graphs for each mechanical property show the value for 20 °C, 4-week-old samples built on edge. Each graph also includes a marker for the 52-week-old samples and line graphs for samples at -40, 0, 40, 80 and 100 °C.

The testing data shows that, in general, part storage conditions have only modest effect on the mechanical properties for samples between 0 °C and 60 °C. At temperature extremes, moisture levels have greater effect on the properties. Also, wet conditions, at any temperature, significantly decrease elongation at break.

TENSILE STRENGTH

Figures 8a and 8b show that samples at 20 °C, both at 4 weeks and 52 weeks, have stable tensile strengths across the three environmental conditions. The range is only 2.0 MPa (5.9%). With the exception of the 0 °C sample, tensile strength is also fairly consistent for all temperatures in wet, dry and controlled conditions. For each temperature, the variances range from 1.3 MPa to 3.4 MPa for the wettest to driest storage environments. At 0 °C, the wet sample has much higher tensile strength (5.4 MPa and 6.1 MPa) than that for dry and controlled part storage.

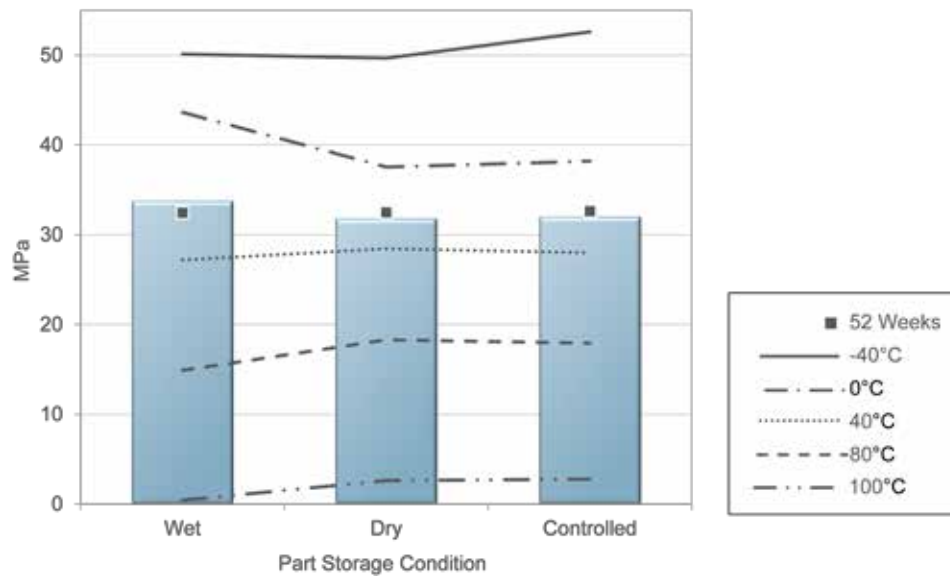


Figure 8a: Tensile strength - 4 weeks, controlled environment, on edge.

Condition	Tensile Strength (MPa)		
	Chart Data	Min	Max
Wet	33.8	33.6	33.9
Dry	31.8	31.7	32.0
Controlled	32.1	32.0	32.2

Figure 8b: Tensile strength - 4 weeks, controlled environment, on edge.

Condition	Tensile Strength (MPa)					
	52 Weeks	-40 °C	0 °C	40 °C	80 °C	100 °C
Wet	32.5	50.1	43.6	27.2	14.9	0.4
Dry	32.5	49.7	37.5	28.5	18.3	2.6
Controlled	32.6	52.6	38.2	28.0	17.9	2.8

Figure 8c: Secondary data, tested in various conditions.

FLEXURAL MODULUS

Part storage conditions have little influence on flexural modulus (Figures 9a, b, c). At 4 weeks, there is only a 50 MPa (2.5%) difference for the wet, dry and controlled samples. At 52 weeks, the difference is even smaller, just 18 MPa (0.9%). In the moderate temperature range (0 °C to 60 °C), flexural modulus remained relatively independent of wet, dry and controlled conditions. For each temperature, the largest variance is only 91 MPa. At the extremes, however, the combination of temperature and environment has significant effect on flexural modulus. At -40 °C, the range is 294 MPa (12.2%). At 100 °C, the range is 993 MPa (86.0%).

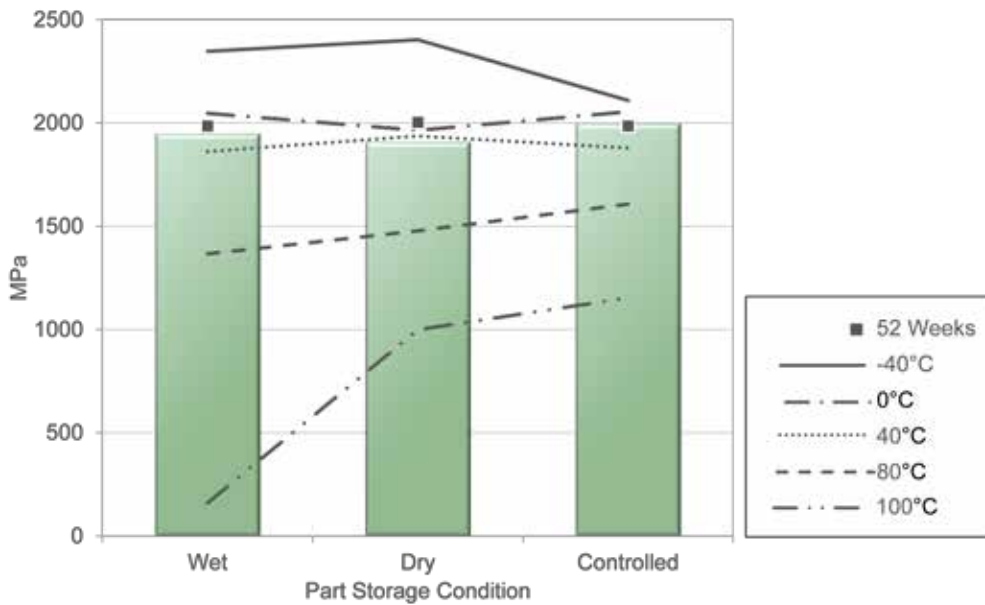


Figure 9a: Flexural modulus - 4 weeks, controlled environment, on edge.

Condition	Flexural Modulus (MPa)		
	Chart Data	Min	Max
Wet	1949	1768	2061
Dry	1909	1708	2184
Controlled	1999	1750	2167

Figure 9b: Flexural modulus - 4 weeks, controlled environment, on edge.

Condition	Flexural Modulus (MPa)					
	52 Weeks	-40 °C	0 °C	40 °C	80 °C	100 °C
Wet	1986	2347	2047	1862	1367	161
Dry	2004	2403	1964	1937	1477	999
Controlled	1986	2109	2055	1879	1607	1154

Figure 9c: Secondary data, tested in various conditions.

ELONGATION AT BREAK

The effects of moist storage conditions on elongation at break are significant for all temperature ranges. Wet samples decrease elongation at break by 1.7 to 3.8 points (25.0% to 44.0%) when compared to the dry and controlled conditions. For all but 40 °C and 52-week samples, elongation at break is relatively stable for dry and controlled conditions. These two exceptions show increases of 0.7 MPa and 1.1 MPa over the value for the controlled sample.

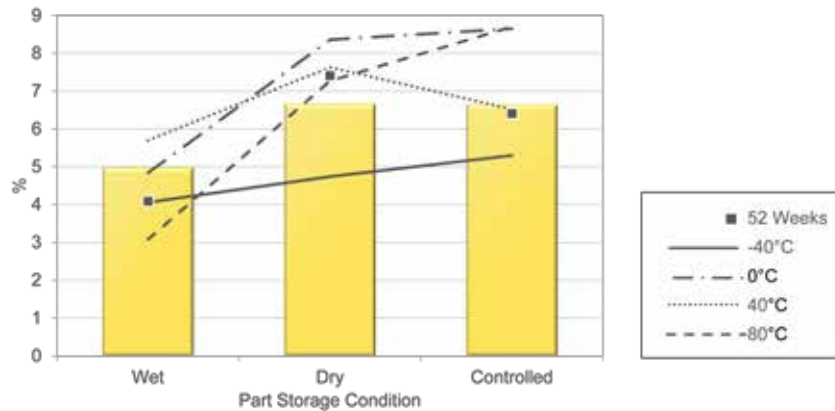


Figure 10a: Elongation at break - 4 weeks, controlled environment, on edge.

Condition	Elongation at Break (%)		
	Chart Data	Min	Max
Wet	5.0	4.6	5.5
Dry	6.7	5.9	8.0
Controlled	6.7	6.0	7.4

Figure 10b: Elongation at break - 4 weeks, controlled environment, on edge

Condition	Elongation at Break (%)					
	52 Weeks	-40 °C	0 °C	40 °C	80 °C	100 °C
Wet	4.1	4.1	4.8	5.7	3.1	0.0
Dry	7.4	4.7	8.7	7.6	7.3	0.0
Controlled	6.4	5.3	8.7	6.5	8.7	0.0

Figure 10c: Secondary data, tested in various conditions.

REPORT CONCLUSION:

Characterization of Material Properties for Fortus ABS-M30

As expected of a thermoplastic, temperature has the greatest effect on the mechanical properties of Fortus ABS-M30. In the moderate temperature range (0 °C to 60 °C), the values are consistent and predictable. At the extremes (below 0 °C and above 60 °C), mechanical properties tend to change significantly or break from the trends seen in the moderate range. Age, on the other hand, has little influence on these properties. Each proves to be consistent across the 52-week testing period.

The second most influential factor is exposure to moist conditions. While dry and controlled environments produce similar results for most test conditions, continuous exposure to a wet environment often alters the mechanical properties significantly. This is especially true when measuring mechanical properties at the temperature extremes.

Stratasys | www.stratasys.com | info@stratasys.com

7665 Commerce Way
Eden Prairie, MN 55344
+1 888 480-3548 (US Toll Free)
+1 952 937-3000 (Intl)
+1 952 937-0070 (Fax)

2 Holtzman St.,
Science Park, PO Box 2496
Rehovot 76124, Israel
+972 74 745-4000
+972 74 745-5000 (Fax)

Local Street Address
City, State, Zip
Phone #
Fax #

©2013 Stratasys Inc. All rights reserved. Stratasys, FDM, Fortus and Finishing Touch are registered trademarks of Stratasys Inc. FDM Technology, Fused Deposition Modeling, Fortus 200mc, Fortus 250mc, Fortus 360mc, Fortus 400mc, Fortus 900mc, Insight, Control Center, FDM Team, Smart Supports, SR-30, SR-100, ABSplus, ABS-ESD7, and TouchWorks are trademarks of Stratasys, Inc. *ULTEM is a trademark of SABIC Innovative Plastics IP BV. All other trademarks are the property of their respective owners, and Stratasys assumes no responsibility with regard to the selection, performance, or use of these non-Stratasys products. Product specifications subject to change without notice. Printed in the USA. FortusABSM30PropertiesReport-US-1013